



INTELLIGENT FACILITY SOLUTIONS

Electric Works, 3 Concourse Way, Sheffield, S1 2BJ

United Kingdom: +44 (0) 114 354 0047


Eire: +353 190 36387

sales@ihdryers.co.uk

www.intelligenthanddryers.com


Antimicrobial Technology - Powered by SteriTouch
 This product contains silver phosphate glass, a biocidal product which controls the growth of micro-organisms on the product surface. This product does not contain nanomaterials.

Step 1
Activate 2 x indicators

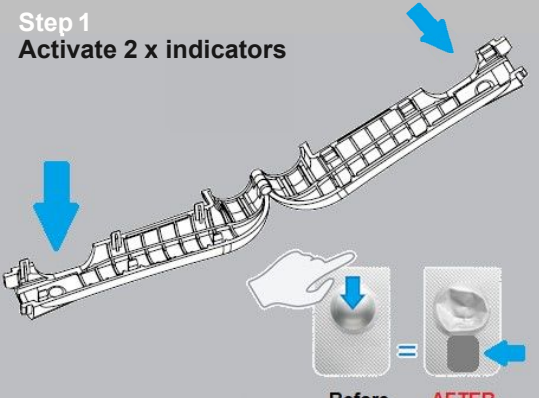


Locate the 2 small silver domes on the inside of the handle. Push down **firmly** on each dome with your thumb until you feel it pop (see **AFTER** picture)

Step 2
Position the cover

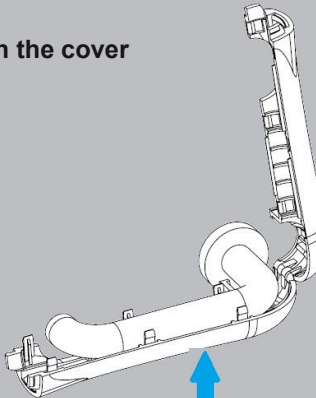

Open the cover fully and position the cover below the handle, making sure that the shaft is centrally aligned.


Step 3
Close the Cover

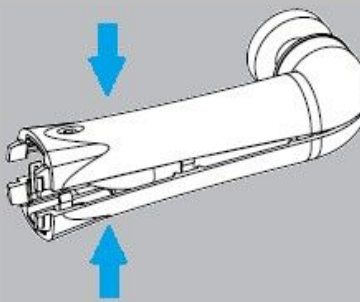

Carefully close the top cover, making sure all the clips engage with the bottom cover.

NOTE - If you cannot close the cover fully go to **3A**

Step 3A
****Only perform if you cannot complete Step 3****

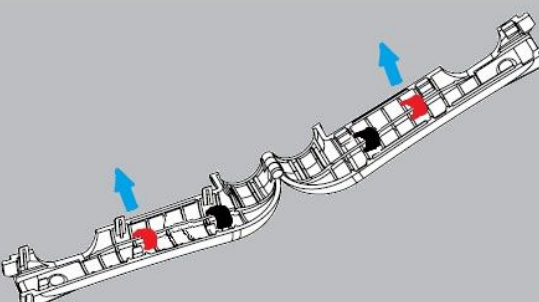


If you cannot close the cover fully, remove the 2 outer rubber inserts (**red**), then complete Step 2 and 3 again.

Step 4
Attach the End Cap and affix Door Sticker



[1] Hold the cover firmly together and push the end cap onto the end of the cover.
 [2] Attach door sticker onto the door so users can see it. Ideal position is above the handle.


Step 5
Replacing the LEVER handle after 6 months

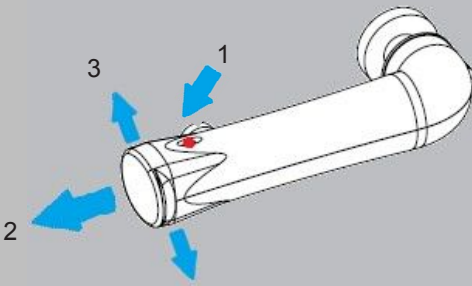

Replace the LEVER handle when the [1] indicator turns **red**, by [2] removing the end cap and [3] firmly pulling apart the cover with your fingers.

Purehold™ Lever Handle - Installation Instructions

Parts

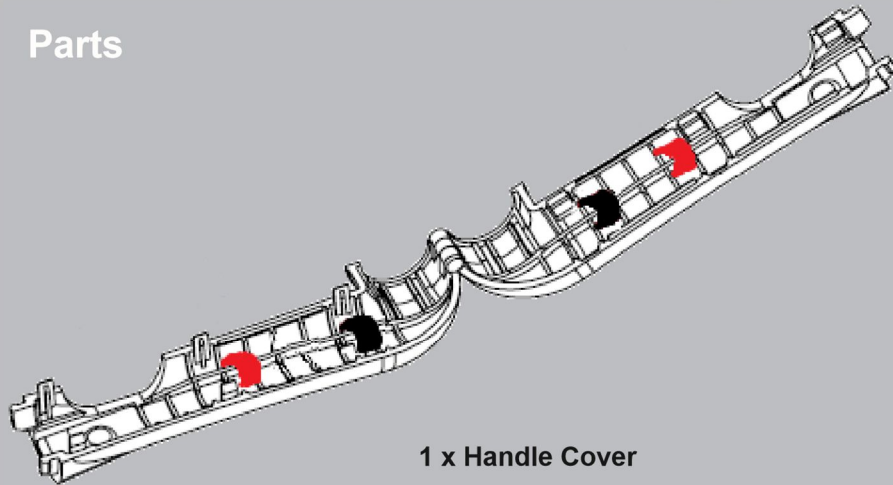

1 x Handle Cover



1 x End Cap



1 x Door Sticker

Need Help?

Please call 0114 354 0047, or e-mail sales@ihdryers.co.uk

Disposal Instructions

Purehold Lever Handles are made from ABS plastic and are capable of being recycled. Please check with your local facility or your collection team if they can recycle them at their facility.



OTHER



Warranty

This product is designed to provide optimum hygiene benefits through a unique, SteriTouch antibacterial coating. This coating gradually wears over time and users are advised when to change the product once the visual indicator turns red. In normal use, Purehold guarantees that this product will remain free from defects in materials and workmanship for a period of 6 months from the date of installation. In very high traffic applications, it may be necessary to change the handle more frequently and this will become evident from a serious deterioration in the surface appearance (i.e. a lot of surface scratches).